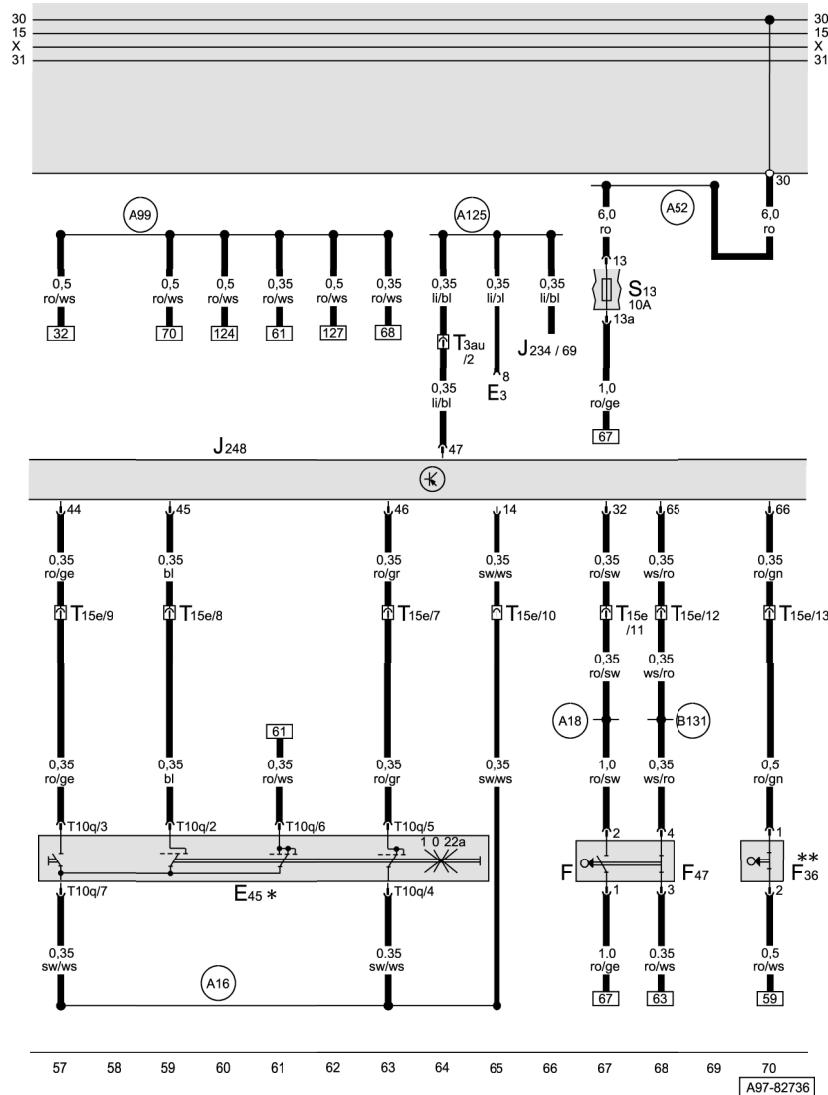


Audi A6

Current Flow Diagram

No. 100 / 6


Diesel direct injection system control unit, cruise control system switch, brake light switch

- E3 - Hazard warning light switch
- E45 - Cruise control system switch
- F - Brake light switch
- F36 - Clutch pedal switch
- F47 - Cruise control system brake pedal switch (diesel direct injection system)
- J234 - Airbag control unit
- J248 - Diesel direct injection system control unit
- S13 - Fuse in fuse box
- T3au - 3-pin connector, red, connector point, electronics box, plenum chamber
- T10q - 10-pin connector, black, on cruise control system switch
- T15e - 15-pin connector, white, connector point, electronics box, plenum chamber
- A16 - Connection (cruise control system), in dash panel wiring harness
- A18 - Connection (54), in dash panel wiring harness
- A52 - Positive (+) connection 2 (30), in dash panel wiring harness
- A99 - Connection -1- (87), in dash panel wiring harness
- A125 - Connection (crash signal), in dash panel wiring harness
- B131 - Connection (54), in interior wiring harness
- * - Models with cruise control system
- ** - Models with manual gearbox

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 ll = purple
 ge = yellow
 or = orange
 rs = pink

A97-82736