

Audi A6**Fitting Locations****No. 802 / 37****Position of fuses, fuse holder, from model year 2005**

No.	Current Flow Diagram designation Fuse carrier ST1 (black)	Nominal value	Function/component	Terminal
1	- SF1 - Fuse 1 on fuse holder	20A	- J749 Fuel pump relay for auxiliary heater -	30
2	- Vacant			
3	- SF3 - Fuse 3 on fuse holder	30A	- J540 Electric park and handbrake control unit -	30
4	- SF4 - Fuse 4 on fuse holder	30A	- J540 Electric park and handbrake control unit	30
5	- SF5 - Fuse 5 on fuse holder	20A	- U18 12 V socket 2 -	30
6	- SF6 - Fuse 6 on fuse holder	5A	- J644 Energy management control unit -	30
7	- SF7 - Fuse 7 on fuse holder	20A	- J393 Convenience system central control unit -	30
8	- SF8 - Fuse 8 on fuse holder	5A	- J529 Anti-theft and tilt system control unit -	30
9	- SF9 - Fuse 9 on fuse holder	30A	- J393 Convenience system central control unit -	30
10	- SF10 - Fuse 10 on fuse holder	35A	- V27 Rear right window regulator motor ¹⁾ - Front passenger side window regulator V148 motor ¹⁾ -	30
11	- SF11 - Fuse 11 on fuse holder	10A 20A	- J446 Parking aid control unit - Cigarette lighter (right-hand drive) U1 -	30
12	- SF12 - Fuse 12 on fuse holder	20A	- U9 - Rear cigarette lighter	30

¹⁾ from November 2005