

Front seats

Removing and installing head restraint guides

For improved clarity, head restraint guide -1- is shown removed.

- Insert padding needle or screwdriver -3- with maximum width of 2 mm into hole -4- (hole -4- is opposite retaining clip for head restraint guide).
- By levering screwdriver -3- in direction of arrow -A- press retainer tab -2- in direction of arrow -B- and in doing so pull out head restraint guide -1-.

