

## Components used to control and regulate air conditioner (in engine compartment)

### Removing and installing fresh air intake duct temperature sensor -G89

- Remove plenum chamber cover.
- → Rotate temperature sensor -A- by approx. 90° and remove.

**Note:**

*The illustration shows the fitting location in a vehicle without air quality sensor.*

