


Fresh Air Blower and Series Resistance with Fuse

Fresh Air Blower -V2-, Removing And Installing


- Remove glove box, refer to →Body Exterior, Interior; Rep. Gr.70.
- Mark wires and disconnect from fresh air blower.
- Remove four screws -A-.
- Loosen blower motor (and mounting plate) from heater box.
- Disengage three rubber bushings -B-.
- Remove mounting plate and blower motor from heater box.

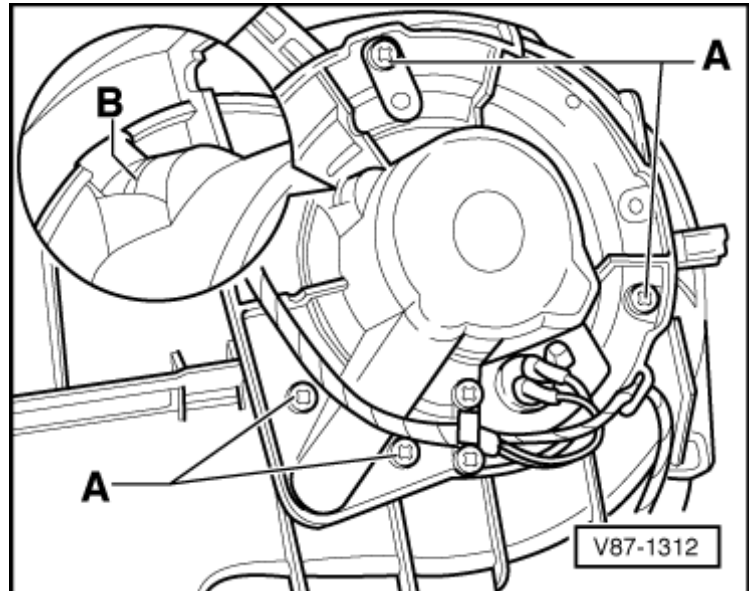

- Remove connector assembly -A- by turning mounting plate in direction of arrow-.
- Remove blower motor.

Install in reverse order of removal noting the following:

- Spray three rubber bushings -B- with silicone before installing.
- Coat sealing surface of mounting plate with silicone rubber sealant before installing.
- Place blower motor in heater box, then install mounting plate over blower motor.
- Rubber bushings -B- must lock into mounting plate

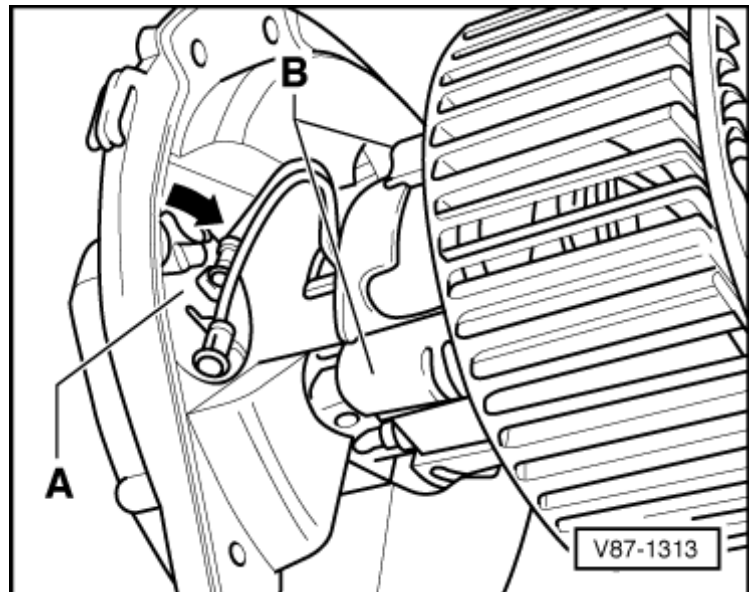

Note

If necessary, reach through fresh air intake duct to hold blower motor from moving.

Fresh Air Blower Series Resistance With Fuse -N24-, Removing And Installing

- Remove glove box, refer to →Body Exterior, Interior; Rep. Gr.70.
- Disconnect harness connector -A-.

- Remove screws -B- and remove fresh air blower series resistance.
- Install in reverse order of removal.

