

Checking dash panel insert components

Checking voltage stabilizer

- Removing dash panel insert => Page [90-8](#)

Note:

Do not detach battery earthing strap; leave all plugs attached to dash panel insert.

- → Check supply voltage by connecting a voltmeter between positive input -1- and earth -2-. Switch ignition on.
 - Specified value: approx. battery voltage
- If specified value is not attained, locate open circuit using current flow diagram and rectify fault.
- → Check output voltage by connecting a voltmeter between positive output -3- and earth -2-. Switch ignition on.
 - Specified value: 9,8 ... 10.4 V
- If specified value is not attained, replace circuit board.

