

Removing and installing window slot seal

Removing and installing window slot seal

- Remove door component carrier =>
Page [58-2](#).
- → Remove grommets -1-.
- Lever off clips -2-.
- Remove window slot seal -3-.

