


## Front seats (3-door vehicles)

### Removing and installing front seat cover

#### 1. Front cover

- Removing
  - Remove front covers - 1- in the area of the retaining clips -2- towards the front.
  - Pull out front trim -1- in direction of arrow -A-.
  - Remove front cover - 1-.
- Installing
  - Engage retaining tab -3- on front trim -1- in bar - 5-.
  - Press on front trim cap -1- so that retaining clips -2- engage on seat -4-.

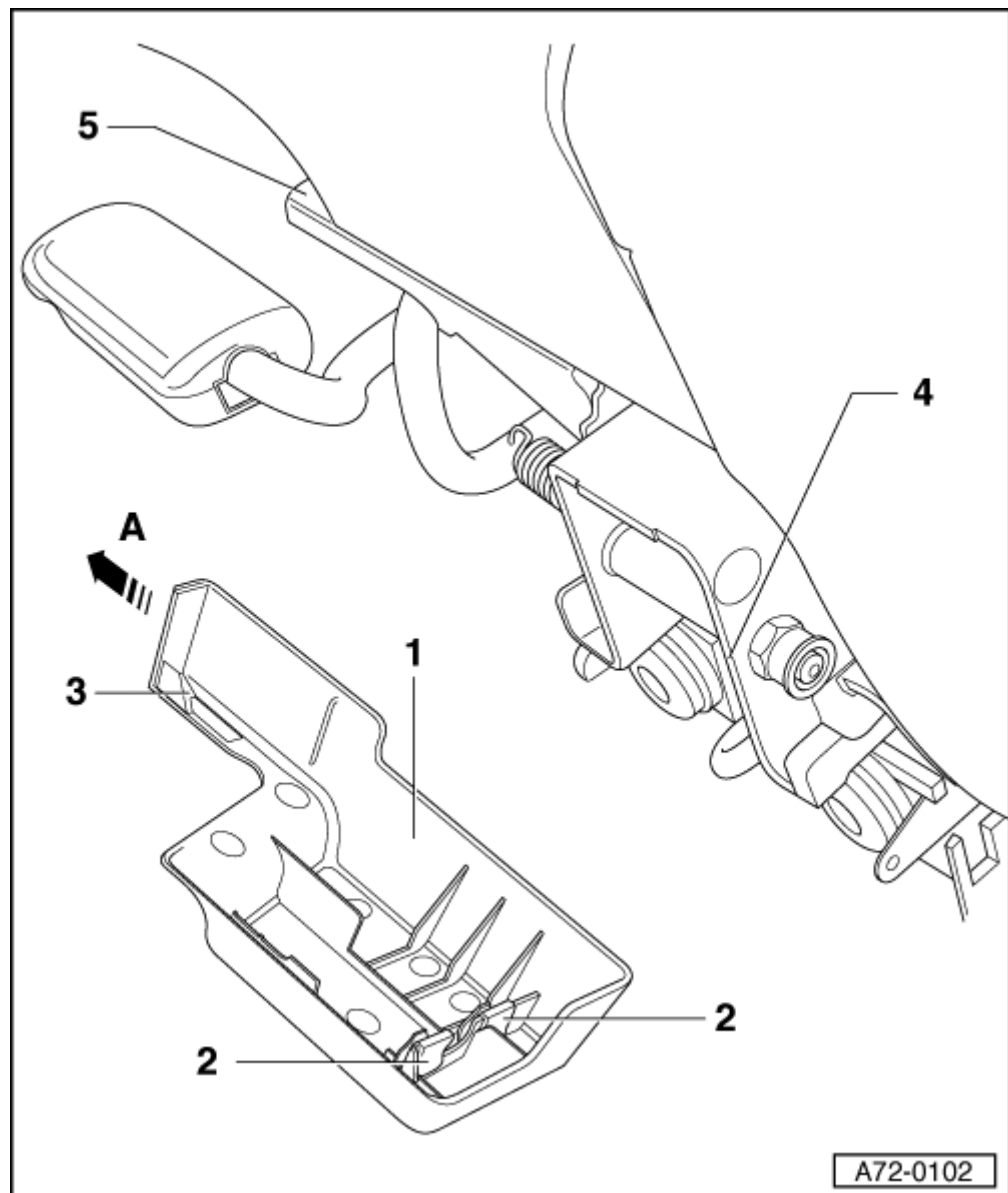

- 2. Retaining clips (2x)
- 3. Retainer tab
- 4. Seat
- 5. Bracket