

Servicing heating


Removing and installing fresh air blower -V2

- Remove glove compartment.

=> [Inner Body Assembly; Repair group 68](#)

- Remove series resistor -N24 => Page [80-27](#).
- → Disconnect connector -A- from fresh air blower.
- Pull fresh air blower -B- downwards out of heater.

Detaching fresh air blower -V2 from base plate

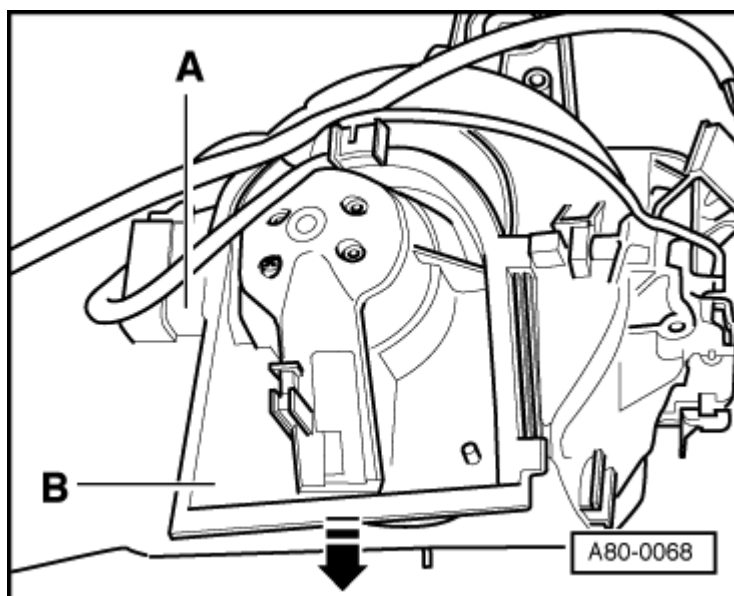

- → Remove bolt -A-.
- Pull fresh air blower out of base plate -B-.

Notes:

- ☐ A soundproofing mat can be attached to base plate -B- for noise insulation.
- ☐ When installing the fresh air blower in the base plate, ensure that connectors -C- are correctly positioned.
- ☐ Following installation, ensure that the fresh air blower is properly positioned in the heater.

