


Servicing heating

Removing and installing series resistor -N24 for fresh air blower

- Remove bolt clip for foam cover.
- Fold foam cover -C- to one side.
- → Disconnect connector -A- from series resistor.
- Remove screws -B- and remove resistor holder.

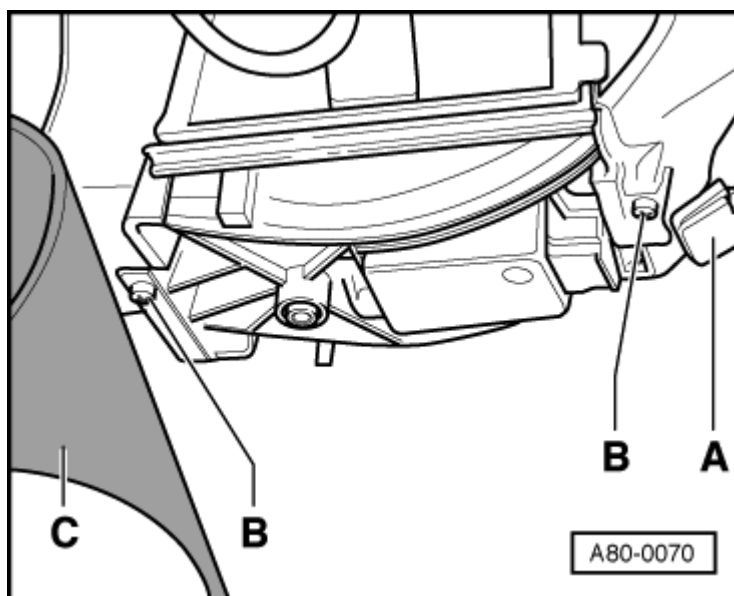

Removing the series resistor from its holder

- → Drill off or detach securing elements -A-.
- Push back catches -C-.
- Remove series resistor -B-.

Note:

When installing, fasten series resistor with self-tapping screw -D- 3.2 x 10 mm.

