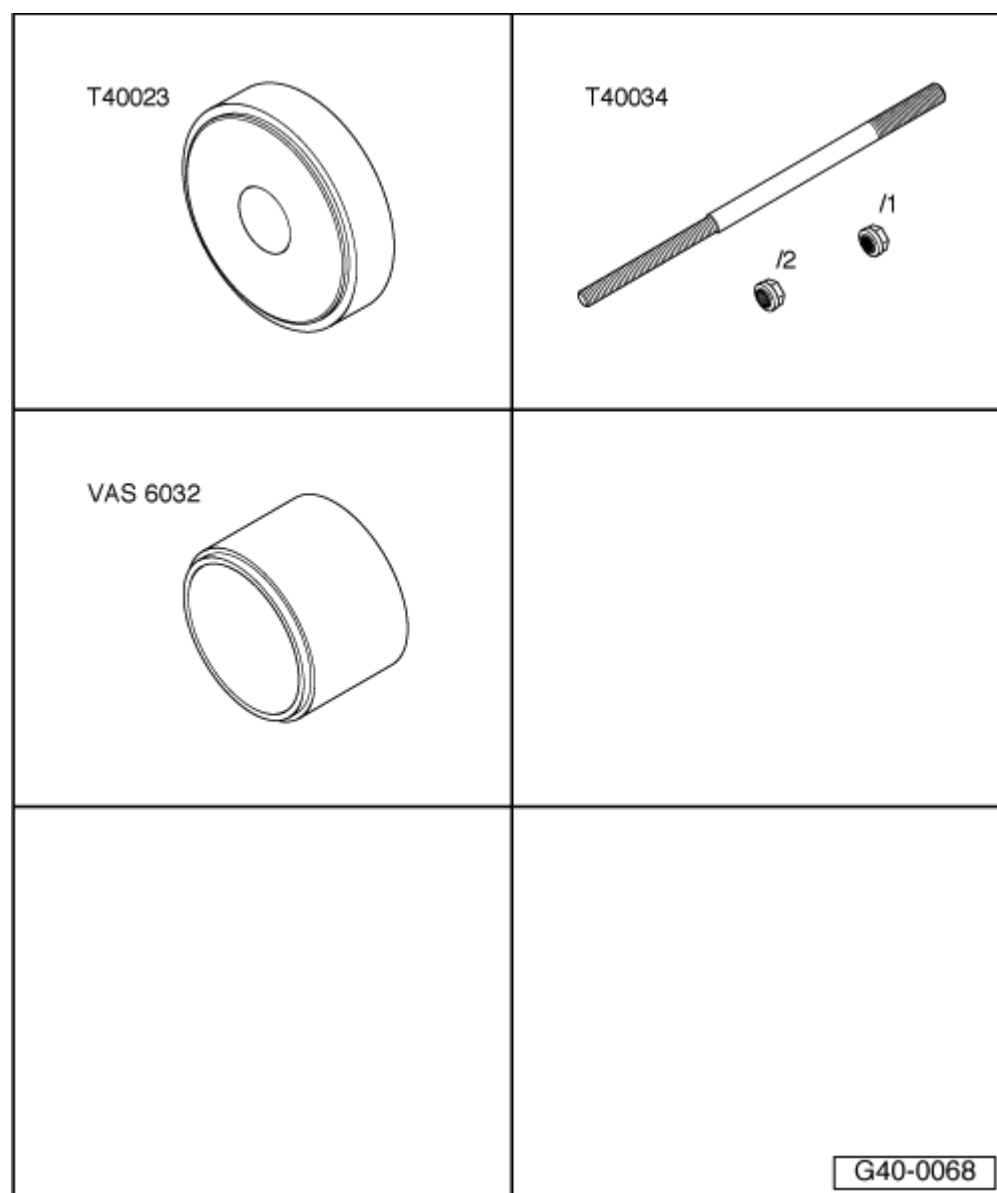


Renewing bonded rubber bush for suspension bracket using -V.A.G 1459 B-**Special tools and workshop equipment required**


- ♦ Thrust piece -T40023-
- ♦ Spindle from assembly tool -T40034-
- ♦ Nut M18x2 -T40034/1-
- ♦ Nut M20x2 -T40034/2-
- ♦ Tube -VAS 6032-

- ♦ Foot pump with high-pressure hose -V.A.G 1389 A/1-

If there is a hand pump -V.A.G 1389/1- available in the dealership it can be converted to a foot-operated pump.

To do this, use the conversion set - V.A.G 1389/4-.


V.A.G 1389 A/1

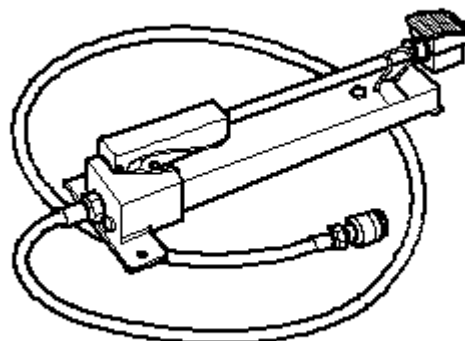

VW00-0681

- ♦ Hydraulic wheel bearing tool - V.A.G 1459 B-
- ♦ Hollow piston cylinder HKZ-15 with thrust piece E-0-204-T (hydraulic)
- ♦ Thrust piece E-3
- ♦ Thrust piece E-5
- ♦ Special nut E-8-214, M20x2


V.A.G 1459 B

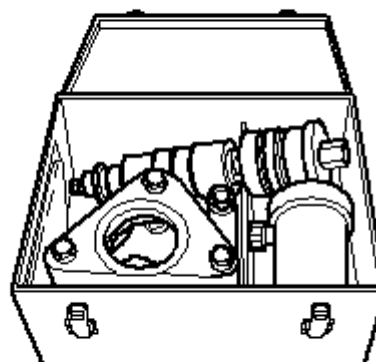

VW00-0676

- ♦ Supplementary set -V.A.G 1459 B/2-
- ♦ Thrust piece E-42

V.A.G 1459 B2

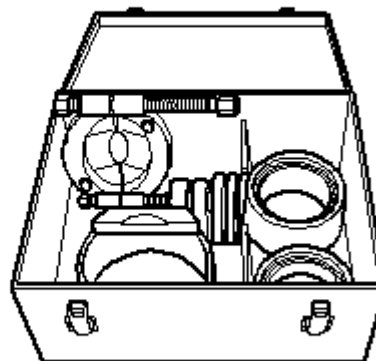

VW00-0678